


**GENERAL NOTE(S) :**

- 1) **THIS DRAWING DETAILS THE ORIENTATION OF THE PME 9/11 SWITCHGEAR FOUNDATION TOP. PLEASE NOTE THE LOCATION OF THE DOORS AND THE LOCATION OF THE ANCHOR BOLT INSERTS.**
- 2) **THE MOST INNER ANCHOR INSERTS (FROM THE CENTER OF THE TOP) ARE USED TO INSTALL THE PME 9 SWITCHGEAR.**

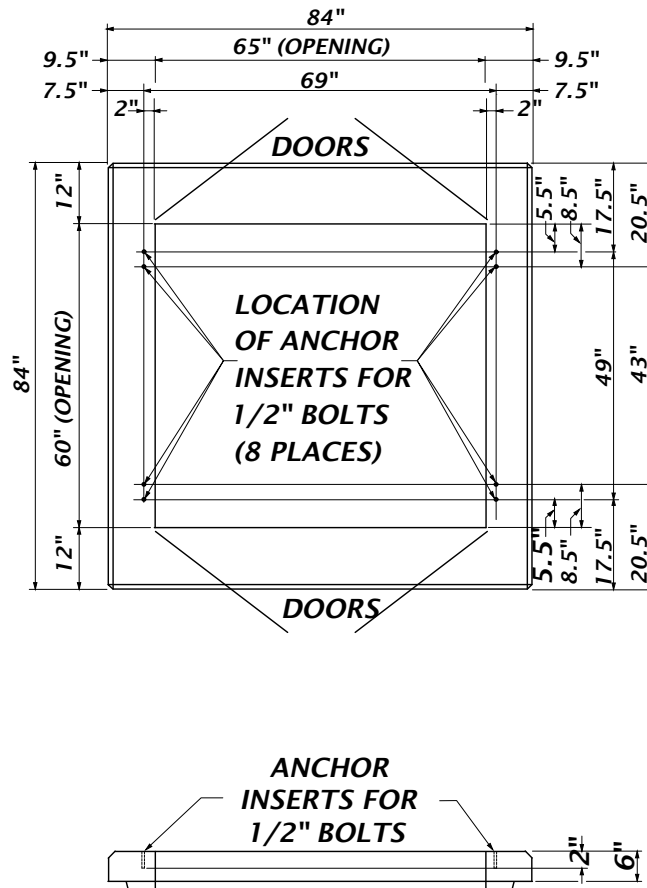

**521**

**TYPICAL 600 AMP. PME 9/11  
SWITCHGEAR TOP LAYOUT  
NTS**

